


Instruction manual for Anti Suspension Trauma Strap model EMERGENCY II



ADJUSTING
BUCKLE



ALUMINIUM
CONNECTOR

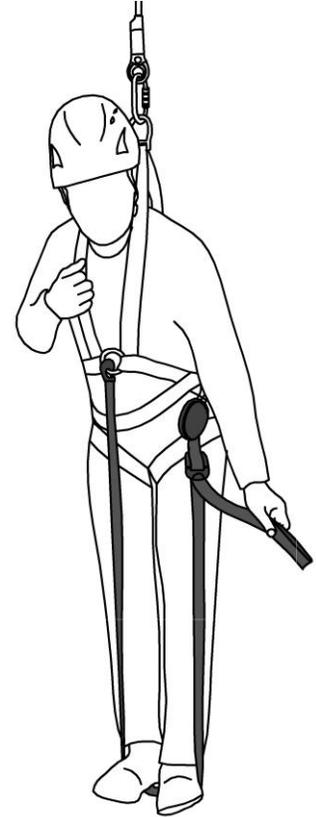

EMERGENCY II - Anti Suspension Trauma Strap

Thank you for choosing VERTIQUAL®! You have purchased a high quality product that will reliably protect you and will be your companion for a long time when working at heights and depths.

This manual must be read and understood before using the product! This product will be used with other equipment (components) thus forming a system for working at heights. Please refer to the instruction manual of each component in your system for compatibility and correct use! Following these instructions accordingly is essential for your safety. Failure to do so can result in serious or even fatal accidents! Keep these instructions together with the product, accessible to all users, so they can consult them whenever is needed!

WARNING!

These instructions are a basic comprehensive guide to the safe use of the purchased equipment. They contain general information about the product, intended to help the user, but cannot cover all the situations that may occur in the daily activities and cannot in any case replace the specialized training courses for safety at heights. This equipment can only be used by well-trained users, who are familiar with the relevant legislation and who have successfully completed a special safety training course for working at heights.

WARNING!

Instructions for use are updated when technical or legislative changes occur. The latest version of the instructions overwrites previous versions and is the only valid version. Please make sure you follow the instructions of the most recent version. You can download the most recent instructions from our website www.vertiqualsafety.com by accessing the section of each product. For help or additional questions, please contact us at office@vertiqualsafety.com or Tel. (+40) 0365/882143.

WARNING!

This product does NOT replace the need for a RESCUE PLAN! It is the responsibility of the employer to prepare a rescue plan for every situation and have designated personnel and appropriate means of intervention!

WARNING!

It is strictly forbidden to use this equipment for fall arrest purposes (in fall arrest systems) or any other purposes than the one it was developed for!


PRODUCT DESCRIPTION

EMERGENCY II will be used by the person that experienced a fall arrest and is now suspended, waiting to be rescued. The purpose of this equipment is to provide support for the user's feet, allowing him/her to stand up and relief the pressure on the femoral arteries caused by prolonged suspension in the full body harness. Once the fall was arrested, the user must quickly deploy EMERGENCY II and step into the loop (standing in an upright position).

Can be used by 1 person weighing up to 140 kg!


ATTACHING TO THE FULL BODY HARNESS: A-B-C-D

A

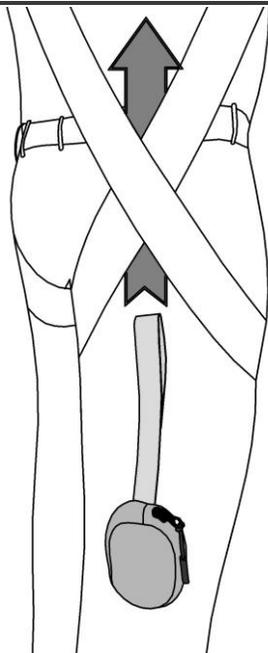


Insert the attachment loop between the body and the two straps of the harness that intersect in the hip area.

B

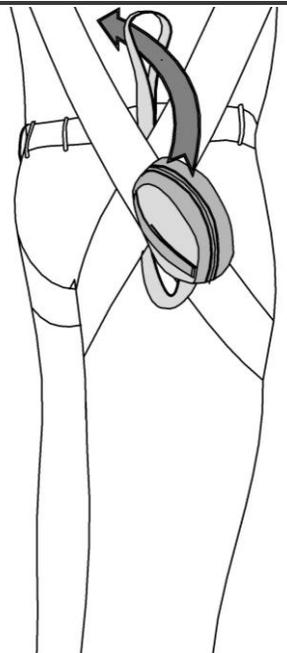


Pass the bag through the loop, forming a knot around the intersection of the straps.

C

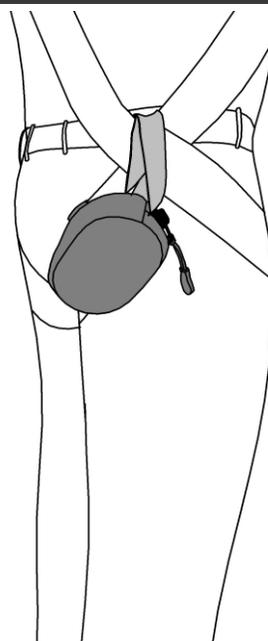

Make sure the knot was made around both intersecting straps, then tighten it.


D

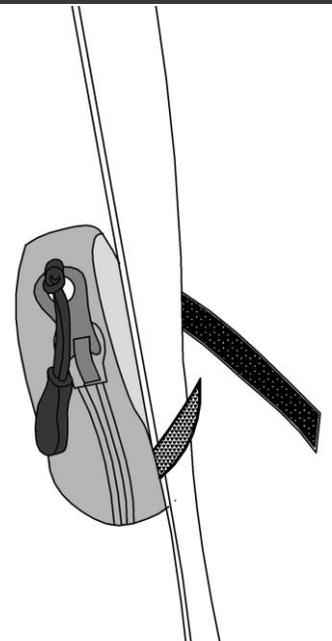

Using the bag's velcro, attach it to the leg strap.


USE (DEPLOYMENT): 1-2-3

1

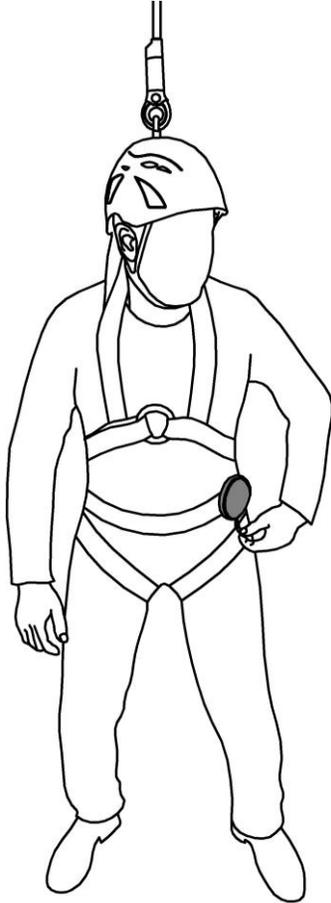


Open the zipper and pull out the webbing

2

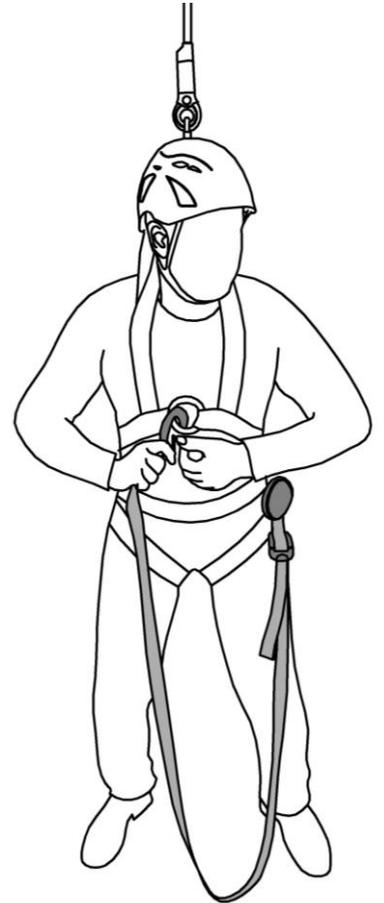


Attach the end connector to the chest attachment point or to the opposite lateral ring of the full body harness

3

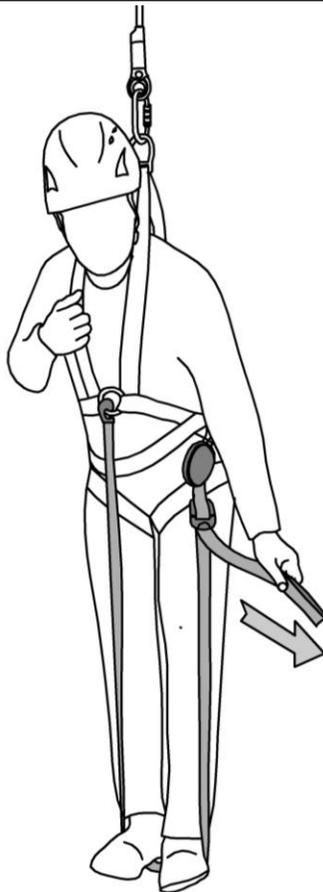


Choose the desired level of support using the adjusting buckle, then step into the loop

ADJUSTING BUCKLE

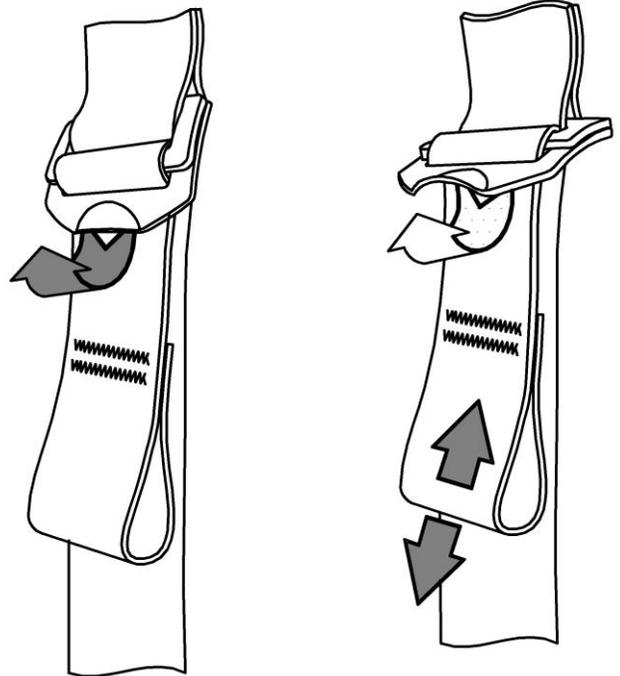

MAIN COMPONENTS

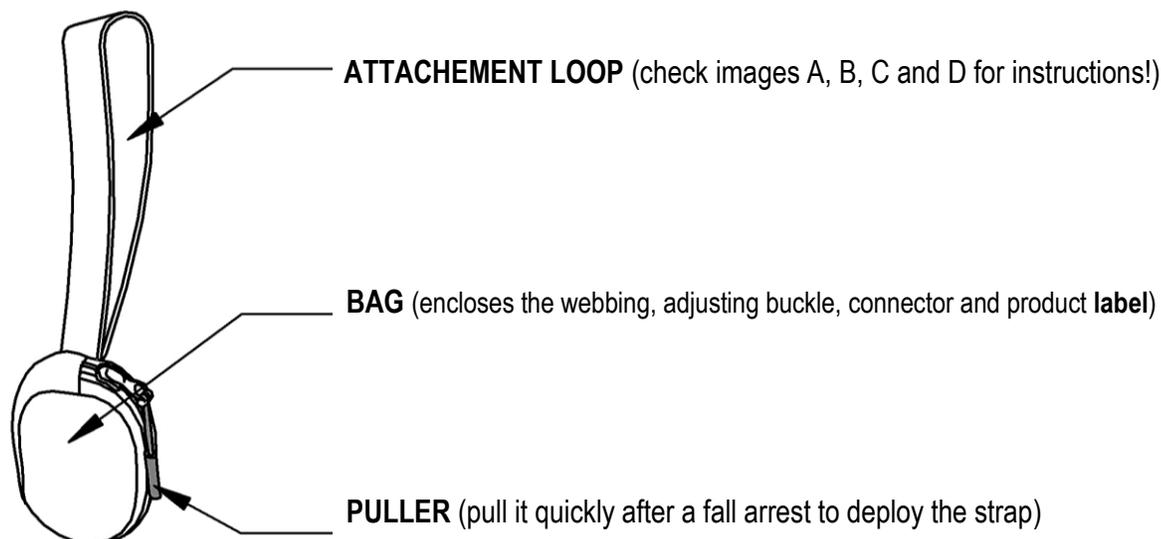

CHECKS! Before use and periodically, the user must perform checks to make sure the product was not damaged. Check carefully all load bearing components (webbings, connector, adjusting buckle and the stitchings).

Look carefully for: cuts, burns, discolorations, hardened or thinned areas, damaged stitching, bended or distorted metal parts, faulty connector gate or any other abnormalities to the components or structure!

WARNING! If damage is identified, this equipment must be immediately discarded and destroyed!

It is recommended to send **EMERGENCY II** along with your full body harness for each periodic inspection!

REPAIRS or any other modifications can be performed only by the manufacturer! Any repairs, modifications or additions performed by anyone else are strictly forbidden!

SERVICE LIFE: the product can be used for as long as **10 years** from the manufacturing date, on the condition that it had not suffered any damages (*see **CHECKS** section for details). **Note:** the manufacturing date is marked on the product label "mm/yyyy".

STORAGE, MAINTENANCE, TRANSPORT: The equipment should be stored in a dry, cool and well-ventilated room, if possible, in its original packaging. While in storage, this equipment must be protected from UV radiation, solar radiation, heat, sparks, incandescent metal splash, electricity, chemicals, sharp objects, heat sources, dust, cement, oils and greases or any kind of contaminants. Buckles and metal parts can be cleaned using a soft cloth or using compressed air. If necessary, the textile parts can be cleaned using warm water (30°C) then rinsed. Drying the wet equipment will be made by hanging it in well-ventilated room away from any heat source. When fully dried, the equipment can be stored accordingly in its packaging (bag or box). Transport of the equipment must be made in its protective bag or box, away from any factor that could contaminate or inflict damage.

WARRANTY AND LIABILITY! The manufacturer offers a **24 month** warranty for this product from the date of manufacturing. Warranty is applicable only for material or manufacturing defects! Damage resulting from normal wear and tear, corrosion, poor maintenance (or no maintenance at all), those resulted from carelessness, accidents, unauthorized repairs or modifications, wrong use of this product or any other reasons are NOT covered by the warranty! Warranty claims only apply to the product. All claims by the user or any other party for the direct, indirect or any consequential damages resulting from the use of this product are excluded from guarantee and liability assumptions. Any claims in this regard are hereby expressly rejected. The user must be informed regarding the dangers of work at heights and depths. He should be aware of the risks and he has to be aware that he is the only responsible for eventual damage, accidents or even death which may result from the use of this equipment. If the user is unable to do so or if he does not have the competence to do so, he cannot use this product. VERTIQUAL Engineering SRL herewith rejects any liability claims for direct, indirect, accidental or consequential damages resulting from the use of this product.